



Grandstream Networks, Inc.

GXV3275 IP Multimedia Phone for Android

Microsoft Lync® Setup Guide



Download Microsoft Lync® to the GXV3275

The Microsoft Lync application can be downloaded directly from GS Market onto the GXV3275.

1. Click on the **GS Market** icon
2. Select the **App** tab scroll to find **Lync 2013**
3. Select **Install**

Once **Install** is selected the application will switch status to **Installing**

Figure 1: Home Screen

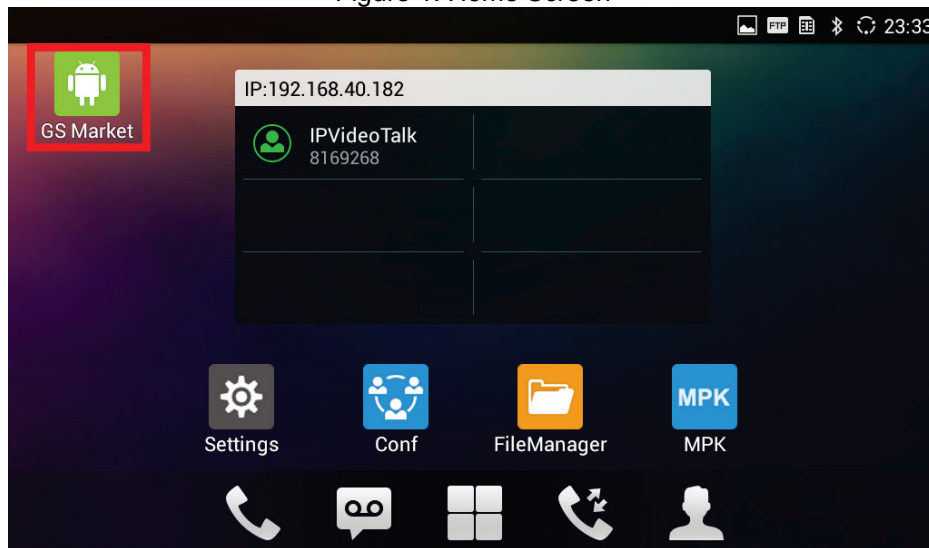


Figure 2: Microsoft Lync® in GS Market


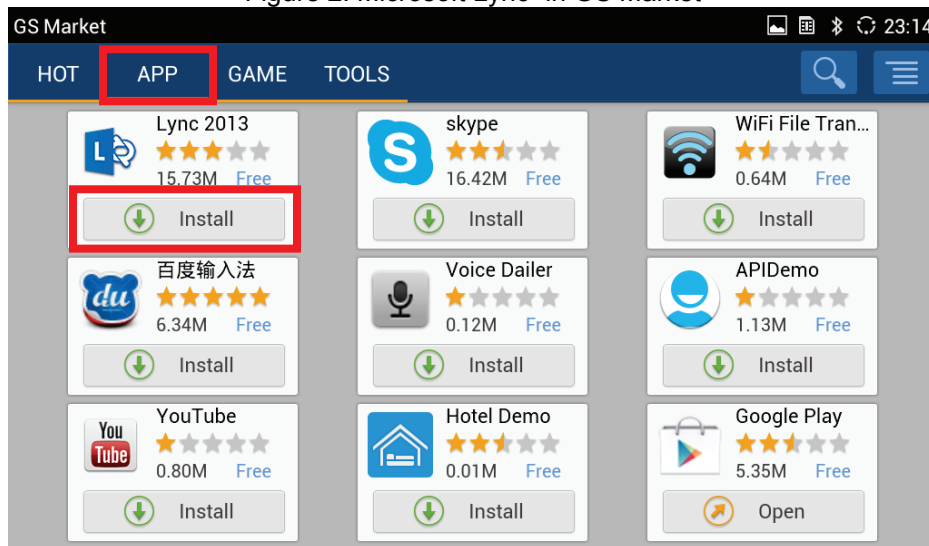


Figure 3: Microsoft Lync Installing




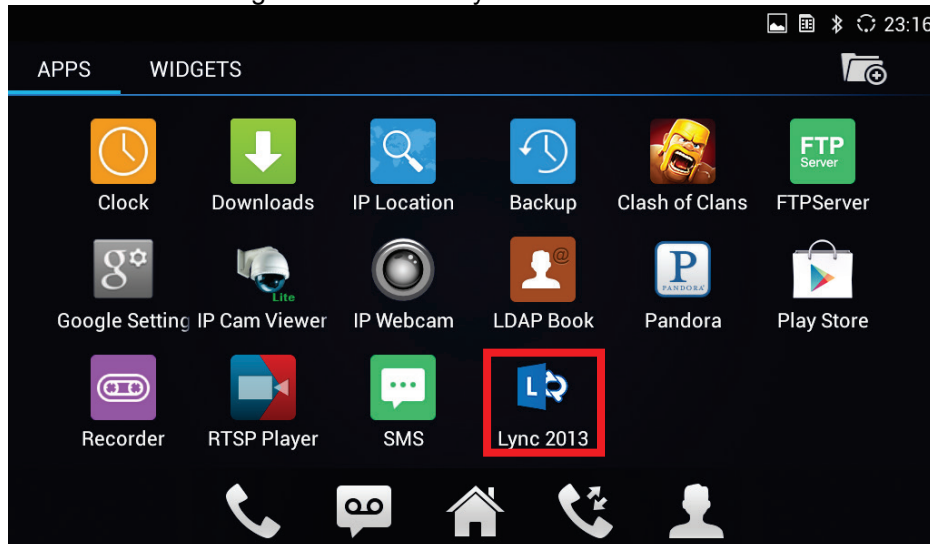
To locate Lync after the installation, return to the home screen, select the Menu  icon
 Toggle through the menu screens by swiping your finger over the touchscreen

Figure 4: Microsoft Lync® in Menu Screen

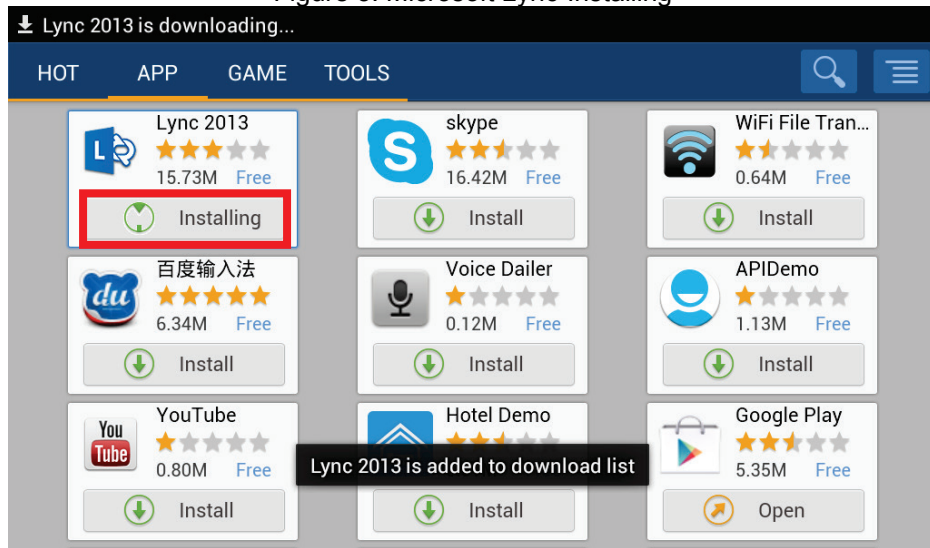

Disable Dialer when Using Lync®

When using Microsoft Lync or other third party applications that utilize audio from the handset, it is recommended that the automatic dialer is disabled. Disabling the dialer will ensure that when the handset is picked up the dialer will not appear on screen during the use of Lync or other applications.


1. From the home screen, toggle the screen to access **System Settings** by sliding your finger down over the screen
2. The **Handset**  icon will indicate that it is **Enabled**
3. Click the **Handset** icon to switch to **Disabled** to always disable the dialer when an application is open
Or
Click the **Handset** icon twice to switch to **Auto**, which will only disable the dialer when an application is requesting access to audio

Figure 5: System Settings & Dialer Enabled

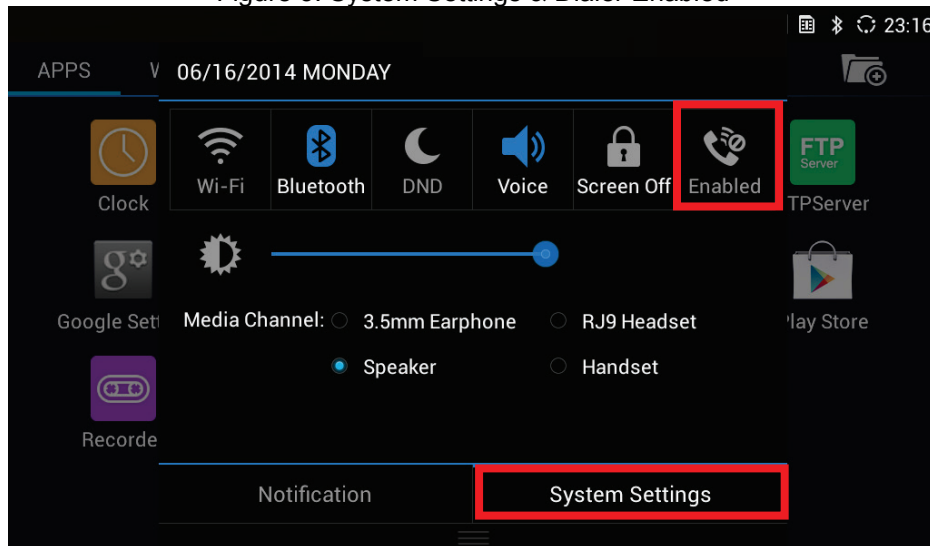


Figure 6: Dialer Disabled


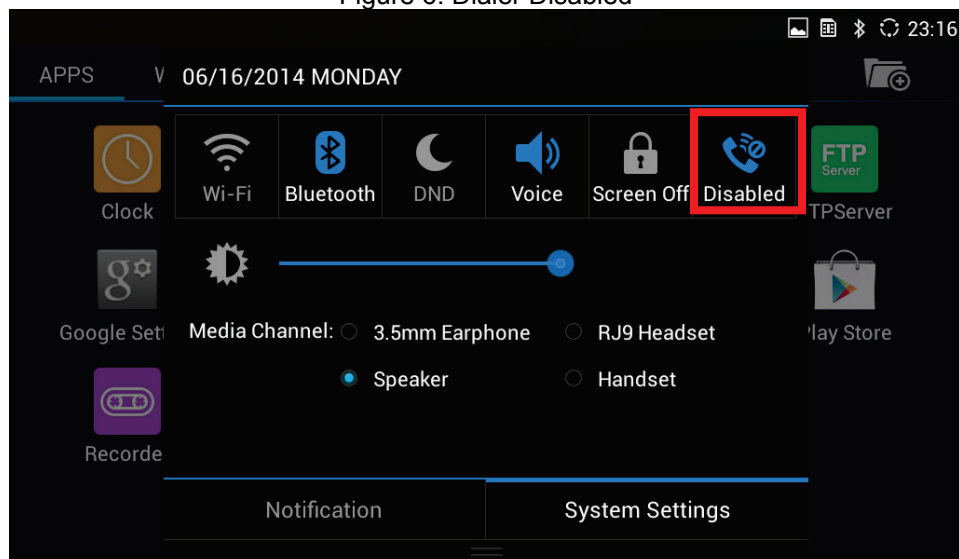


Figure 7: Dialer on Auto

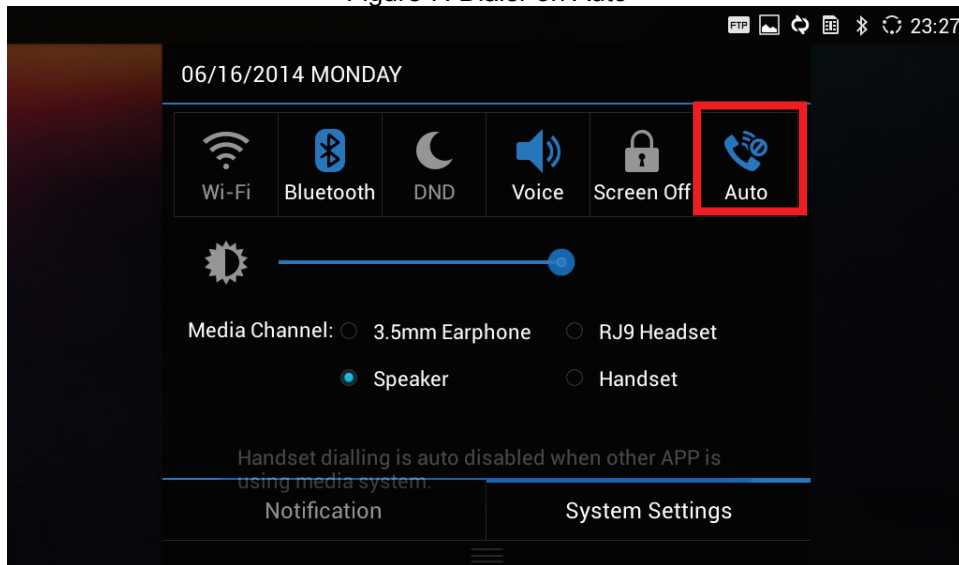

Optional -- Set Lync® as the Primary Account on Phone (& Disable IPVideoTalk)

IPVideoTalk is the default primary account on the GXV3275. In order to set the Microsoft Lync account as the primary, please follow the steps below.

1. From the home screen select **Settings**
2. Scroll down through the options and select **Advanced Settings**
3. Select **Account**
4. Select the **IPVideoTalk** account, which is typically located towards the bottom of the list
5. Switch **Account Activation** from **ON** to **OFF**
6. Click **OK** to save the changes

Once the IPVideoTalk account has been deactivated, when the dialer is open the first account listed should be the Lync user account.

Figure 8: Advanced Settings

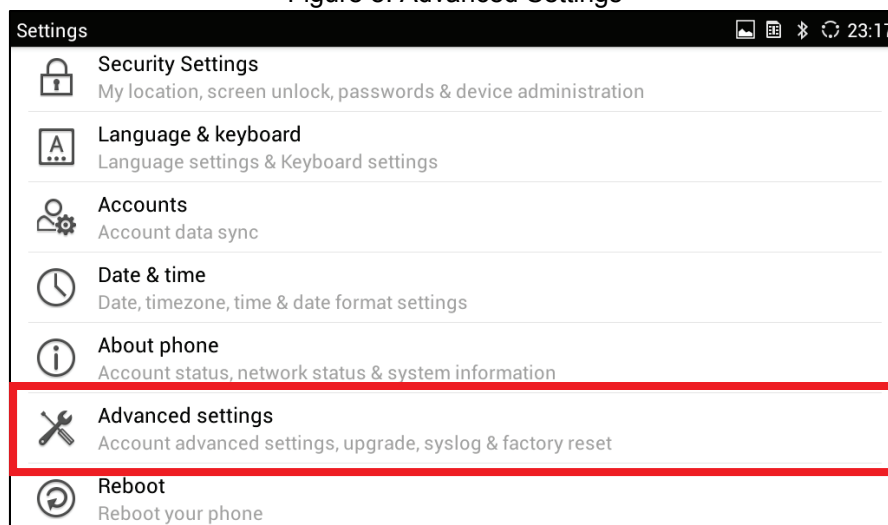


Figure 9: Account Settings

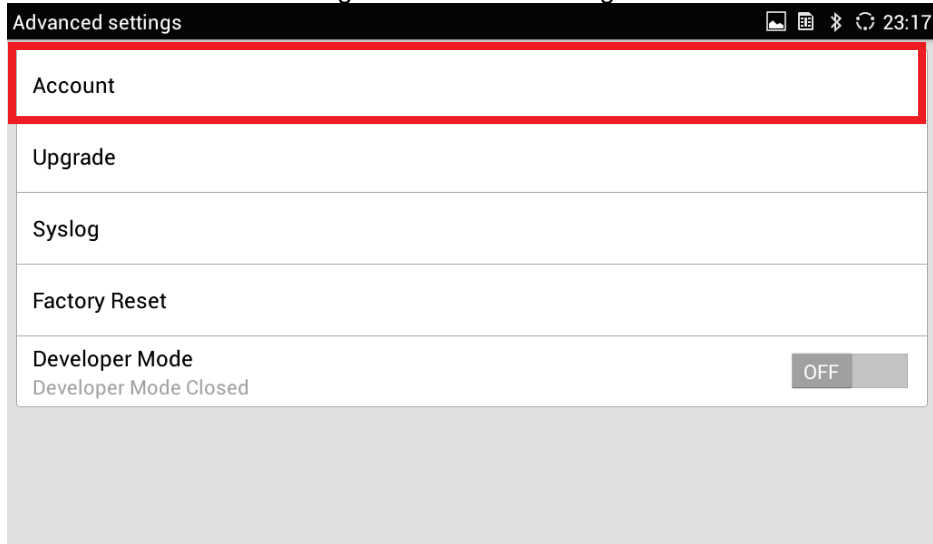


Figure 10: Select IPVideoTalk Account


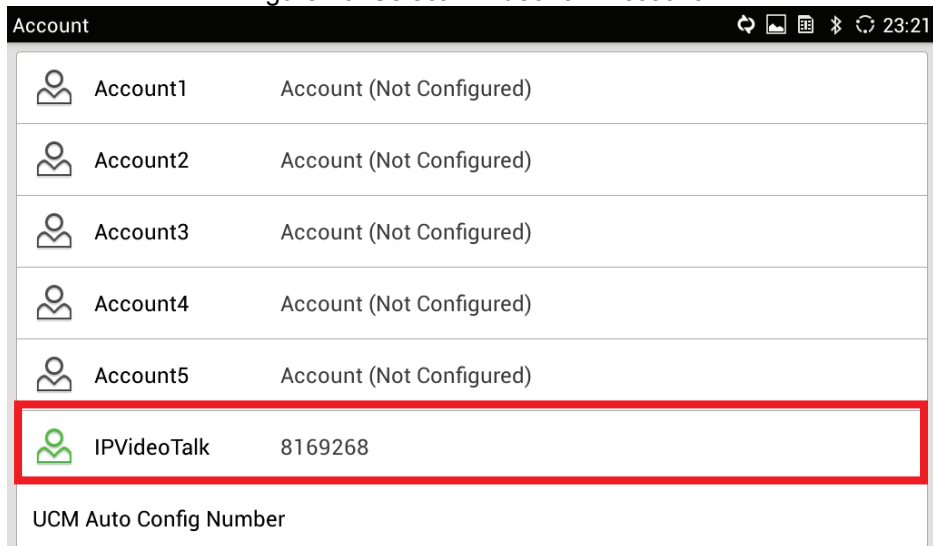


Figure 11: Account Activation ON

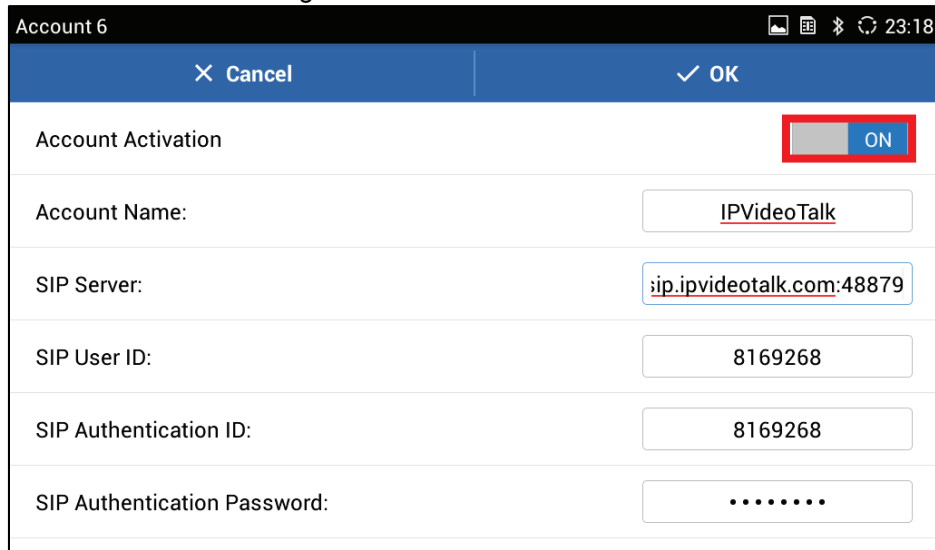

Account 6

Account Activation ON

Account Name: IPVideoTalk

SIP Server: sip.ipvideotalk.com:48879


SIP User ID: 8169268

SIP Authentication ID: 8169268

SIP Authentication Password:

The screenshot shows a mobile application interface for 'Account 6'. At the top, there are icons for signal strength, Wi-Fi, Bluetooth, and battery, along with the time 23:18. Below the status bar is a blue header with 'Cancel' and 'OK' buttons. The main content area has a white background. The 'Account Activation' toggle is set to 'ON' and is highlighted with a red box. Below it are several input fields: 'Account Name' (IPVideoTalk), 'SIP Server' (sip.ipvideotalk.com:48879), 'SIP User ID' (8169268), 'SIP Authentication ID' (8169268), and 'SIP Authentication Password' (masked with dots).

Figure 12: Account Activation OFF

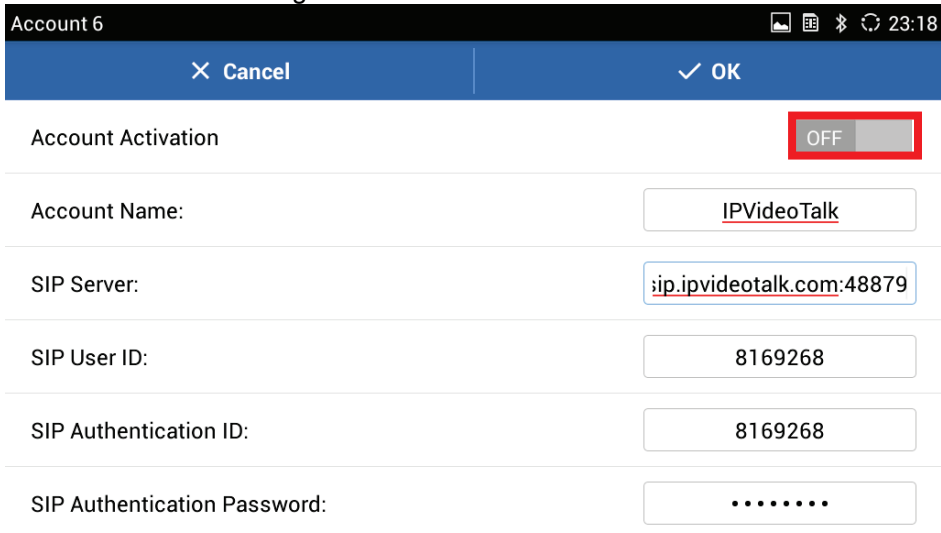

Account 6

Account Activation OFF

Account Name: IPVideoTalk

SIP Server: sip.ipvideotalk.com:48879

SIP User ID: 8169268

SIP Authentication ID: 8169268

SIP Authentication Password:

The screenshot shows the same mobile application interface as Figure 11, but the 'Account Activation' toggle is now set to 'OFF' and is highlighted with a red box. All other settings remain the same.

Figure 13: Dialer (after changes) showing Lync as primary account

