1. First, please plug the DVD MAKER 2 device into usb port and use the included CD to install the Driver and application. After you completely setup driver, you can see the device in the device manager as below:

Device Manager     File Action View Help       Device Manager     File Action View Help       Remote settings     Image: Ima	Control Panel Home	- Device Manager	
Device Manager       File Acton View Heip         Remote settings         System protection         Advanced system settings         Disk drives	Control Panel Home		
Remote settings System protection Advanced system settings  P Alex, ho +PC  Disklay datapters Disklay	Device Manager	Hie Action View Help	
System protection Advanced system settings  Advanced s	Remote settings		
Advanced system settings Advanced set	System protection	Alex_ho-PC	
		B → Disk drives Display adapters Display adapters Display adapters Display adapters Display adapters Display adapters E → Keyboards Monitors B → Metwork adapters Monitors B → Network adapters D → Unknown device D → Unknown device D → Processors S → Statex High Definition Audio USB 2851 Device	
		😟 – 🏺 Universal Serial Bus controllers	
B – ↓ Universal Serial Bus controllers			
E – Universal Serial Bus controllers			
由一 🏺 Universal Serial Bus controllers			
E – ♥ Universal Serial Bus controllers			

2. Please confirm the Multimedia player (as the VCD/DVD player...) has been connected to DVD Maker USB2.0



Device via Composite/S-video cable. And press the play function of the Multimedia player.

3. Find the S-Video or Composite connector of your Multimedia player.



4. Connect the S-Video in / Composite in and the Audio-in RCA jack between the DVD MAKER USB2.0 and the Multimedia player. And plug the 3.5mm Audio Cable in the Line in/Microphone in (Laptop) of sound card in PC.







5. Please launch Application:



Click the Capture option to let application to detect the DVD MAKER 2 device to use.

Notice: setting→video setup/ capture source→TV setup/format(as illustrated by the following pictures)



CyberLink PowerDirector-New Untitled Project		_ <u>_</u> ×
Capture Edit Produce Cr		PowerDirector
() () () () () () () () () () () () () (	Captured Clips	î
	Analog Video Settings	
	Video Setup Adjust Video TV Setup	
	Capture device: USB 2861 Device	
	Capture source: Video SVideo	E
	Audio device: USB 2861 Device	
	Audo input:	
~~~	Mixer	
Capture Options	OK	×
	Change Folder C:\Users\4Jex_ho\Documents\	
I ime limit 00:00:00	Recorded 0.0 Byte	Profile
Size lmit 0000 MB	Free 10.4 GB	
	Used 9.6 GB	DVD HQ
	Dropped	Settings
	Recorded video length: 00:00:00	USB 2861 Device
	Available length:	
	02:36:35	USB 2861 Device
Af Start 👩 😭 💽 🚳 🚿		EN 🕆 🕕 🕞 🕪 9:05 PM =

😒 CyberLink PowerDirector-New Untitled Project		_ <del>_</del> # ×
File Edit View Capture Playback Help		
Capture Edit Produce C	Yeate Disc	PowerDirector
👔 📾 🛋 🎽 🧕 🖢 🎯	Captured Clips	
Capture Options         Time limit         Size limit         00000 MB	Analog Video Settings Video Satup Adjust More TV Setup Television signal format Locations Intered States Vigin Islands NTSC: - Format (uner): Pormat (non-tuner): Pormat (non-tuner): Charge Fable: Charge Fable	Profile DVD HQ Settings
	00.00.00 Available length:	USB 2861 Device
	02.36.35	USB 2861 Device
🍂 👔 🗿 🚳	E	EN 🛠 👍 😼 🗭 9:07 PM 💻