

Quick Connection Guide Using Speed Dial

For details on operations, refer to the Operating Instructions (stored in the supplied CD-ROM).

To begin with

Turn on your Video Communication System and TV monitor, and check the following to ensure that connection is possible.




① Is the picture of your camera (local picture) on the monitor screen?

Note: Connection to a remote party is not possible if neither the IP address nor ISDN indicator is displayed.

② Select "Information" and press PUSH ENTER

 ③ **When using the LAN**
Is the LAN indicator highlighted and is the IP address displayed?




③ **When using the ISDN**
Are one or more ports of the ISDN indicator highlighted?

Main indicators that appear during communication


	Controlling a remote camera
	Local microphone is turned off
	Sending a still image
	Receiving a still image
	Sending or receiving a computer screen
	Sending or receiving data from a whiteboard
	Sending dual video

After checking...

Let's connect

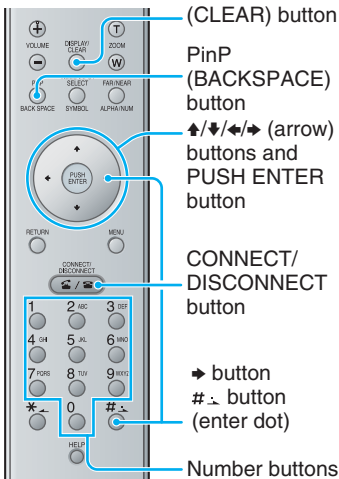


1 Verify the "LINE I/F".

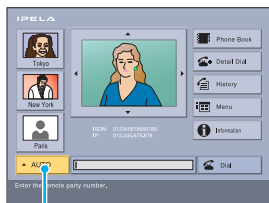

Line I/F

 
To change




Select the type of line to use.

Press.

2 Select the Number text box and press PUSH ENTER.

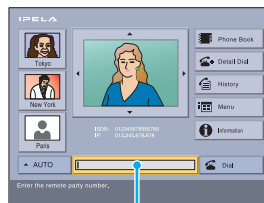

Number text box

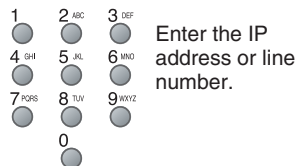


3 Select "Dial" and press PUSH ENTER.



Dial

Or press

4 The system dials and establishes communication.

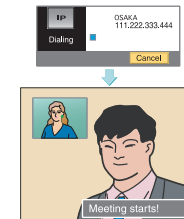


Remote Commander Guide: Operations available during communication

For details on operations, refer to the Operating Instructions (stored in the supplied CD-ROM).

Switching the picture on the TV monitor

Each press of DISPLAY switches the picture.

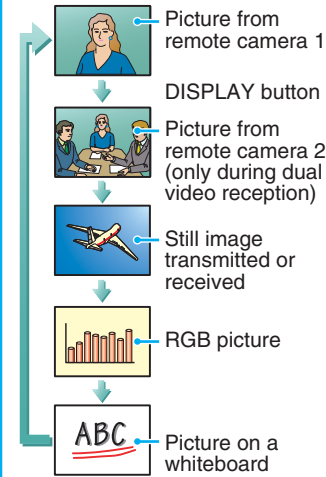

Note: You can switch among the available pictures only.


Switching on/off the local microphone

Adjusting the sound of the remote party


- To increase the volume
- To decrease the volume

Changing the location of the window picture


Each press of PinP changes the location of the window.

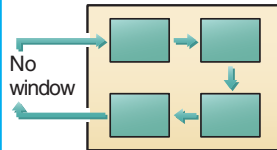

Adjusting the camera angle

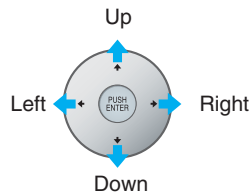

Using convenient functions

 


A submenu opens to enable sending of still images, etc.

Adjusting the camera zoom

- To enlarge the picture
- To reduce the picture


Selecting the displayed picture and the camera

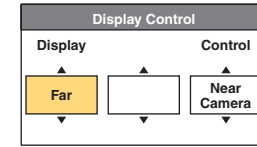

Display: Select the "Near" or "Far" picture to be displayed on the monitor screen.
Control: Select the "Near Camera" or "Far Camera" to be controlled.

Selecting the input picture

 Select the "Near" (local) picture and the "Far" (remote) picture.



MAIN CAMERA: Selects the video from the MAIN CAMERA.

SUB CAMERA: Selects the video from the SUB CAMERA.

AUX1: Selects the video from the device connected to the MAIN AUX IN connector.


AUX2: Selects the video from the device connected to the SUB AUX IN connector.

IR1: Selects the video from the optional PCS-DS150 Document Stand.

IR2: Selects the video from the optional PCS-DS150 Document Stand.

Displaying the menu available during communication

Ending the conference

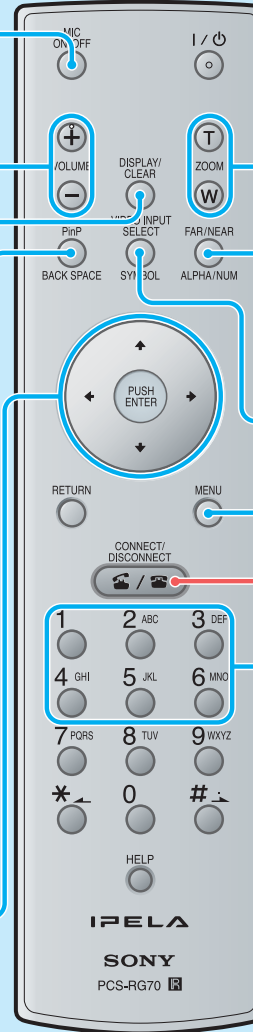

Presetting the camera angle

Press button 1 to 6 quickly to move the camera to the preset position. Hold down button 1 to 6 to preset the current camera position.

Note: If you press button 1 to 6 quickly when there is no preset setting, the camera moves to the center position.