

VIDEO COMMUNICATION SYSTEM PCS-G70

Quick Connection Guide Using Speed Dial

For details on operations, refer to the Operating Instructions

To begin with

Turn on your Video Communication System and TV monitor, and check the following to ensure that connection is possible



① Is the picture of your camera (local picture) on the monitor screen?

Note: Connection to a remote party is not possible if neither the IP address nor ISDN indicator is displayed.

② Select "Information" and press PUSH ENTER

③ When using the LAN  
Is the LAN indicator highlighted and is the IP address displayed?




③ When using the ISDN  
Are one or more ports of the ISDN indicator highlighted?

Main indicators that appear during communication

	Controlling a remote camera
	Local microphone is turned off
	Sending a still image
	Receiving a still image
	Sending or receiving a computer screen
	Sending or receiving data from a whiteboard
	Sending or receiving dual video

After checking...

Let's connect

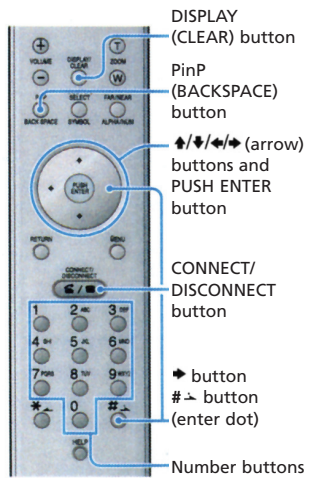

1 Verify the "LINE I/F".



Line I/F To change




Select the type of line to use.

Press.

2 Select the Number text box and press PUSH ENTER.



Number text box

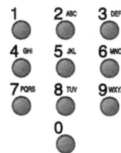

Enter the IP address or line number.


3 Select "Dial" and press PUSH ENTER.



Dial

Or Press

4 The system dials automatically and establishes communication.

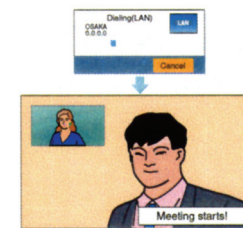

# QUICK REFERENCE GUIDE

## Remote Commander® Unit Guide: Operations available during communication

For details on operations, refer to the Operating Instructions

### Switching the picture on the TV monitor

Each press of DISPLAY switches the picture.

- Picture from remote camera 1  
DISPLAY button
- Picture from remote camera 2 only during dual video reception
- Still image transmitted or received
- RGB picture
- Picture on a whiteboard

**Note:** You can switch among the available pictures only.

### Switching on/off the local microphone

### Adjusting the sound of the remote party

- To increase the volume
- To decrease the volume

### Adjusting the camera zoom

- To enlarge the picture
- To reduce the picture

### Selecting the displayed picture and the camera

**Display:** Select the "Near" or "Far" picture to be displayed on the monitor screen.  
**Control:** Select the "Near Camera" or "Far Camera" to be controlled.

### Changing the location of the window picture

Each press of PinP changes the location of the window.

No window

### Displaying the menu available during communication

### Ending the conference

### Selecting the input picture

Select the "Near" (local) picture and the "Far" (remote) picture.

**MAIN CAMERA:** Selects the video from the MAIN CAMERA.  
**SUB CAMERA:** Selects the video from the SUB CAMERA.  
**Aux 1:** Selects the video from the device connected to the MAIN AUX IN connector.  
**Aux 2:** Selects the video from the device connected to the SUB AUX IN connector.  
**IR1:** Selects the video from the optional PCS-DS150 Document Stand.  
**IR2:** Selects the video from the optional PCS-DS150 Document Stand.

### Adjusting the camera angle

### Using convenient functions

A sub-menu opens to enable sending of still images, etc.